

How to operate the TV

如何操作电视

Power button

电源

Japanese TV programs

日本电视节目

Volume button

体积

Japanese TV programs

日本电视节目

HDMI Channel switching

HDMI输入切换

TV Show switching

电视节目切换

Confirm button

决定



How to get hot water out of the bath

如何排出浴缸里的热水

This remote control can also be used to supply hot water to the kitchen.
该遥控器还可以为厨房提供热水




Temperature settings
温度设置

Power button
电源

How to wash

如何洗衣机

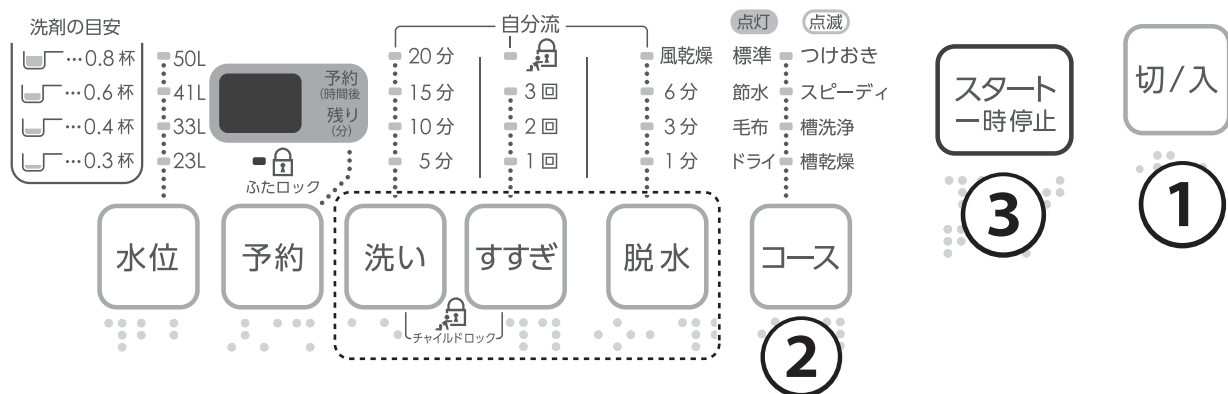

1 電源を入れます
Turn on the power
打开电源

2 コースを選択します Select course 选择课程

標準 standard wash
标准洗涤

つけおき just wash
只是洗

節水 standard wash
快洗

スピーディ rinse and spin
冲洗和脱水

毛布 strong wash
强力洗涤

槽洗浄 spin cycle
脱水

スピーディ speed wash
速洗

槽乾燥 washing tank cleaning
洗衣机滚筒清洁

3 スタートします
Start
开始

How to air conditioner

如何空调

Dehumidification

除湿

Cooling

冷却

Stop

停止

Auto swing

自动摇摆

Wind direction

风向

Heating

加热

Temperature settings

温度设置

Air volume

风量





VACATION INN 羽田 | 東京都大田区東糀谷 3-5-7-103

VACATION INN HANEDA | 3-5-7-103 Higashi-Koujiya Ota-ku Tokyo JAPAN

How to air conditioner

如何空调

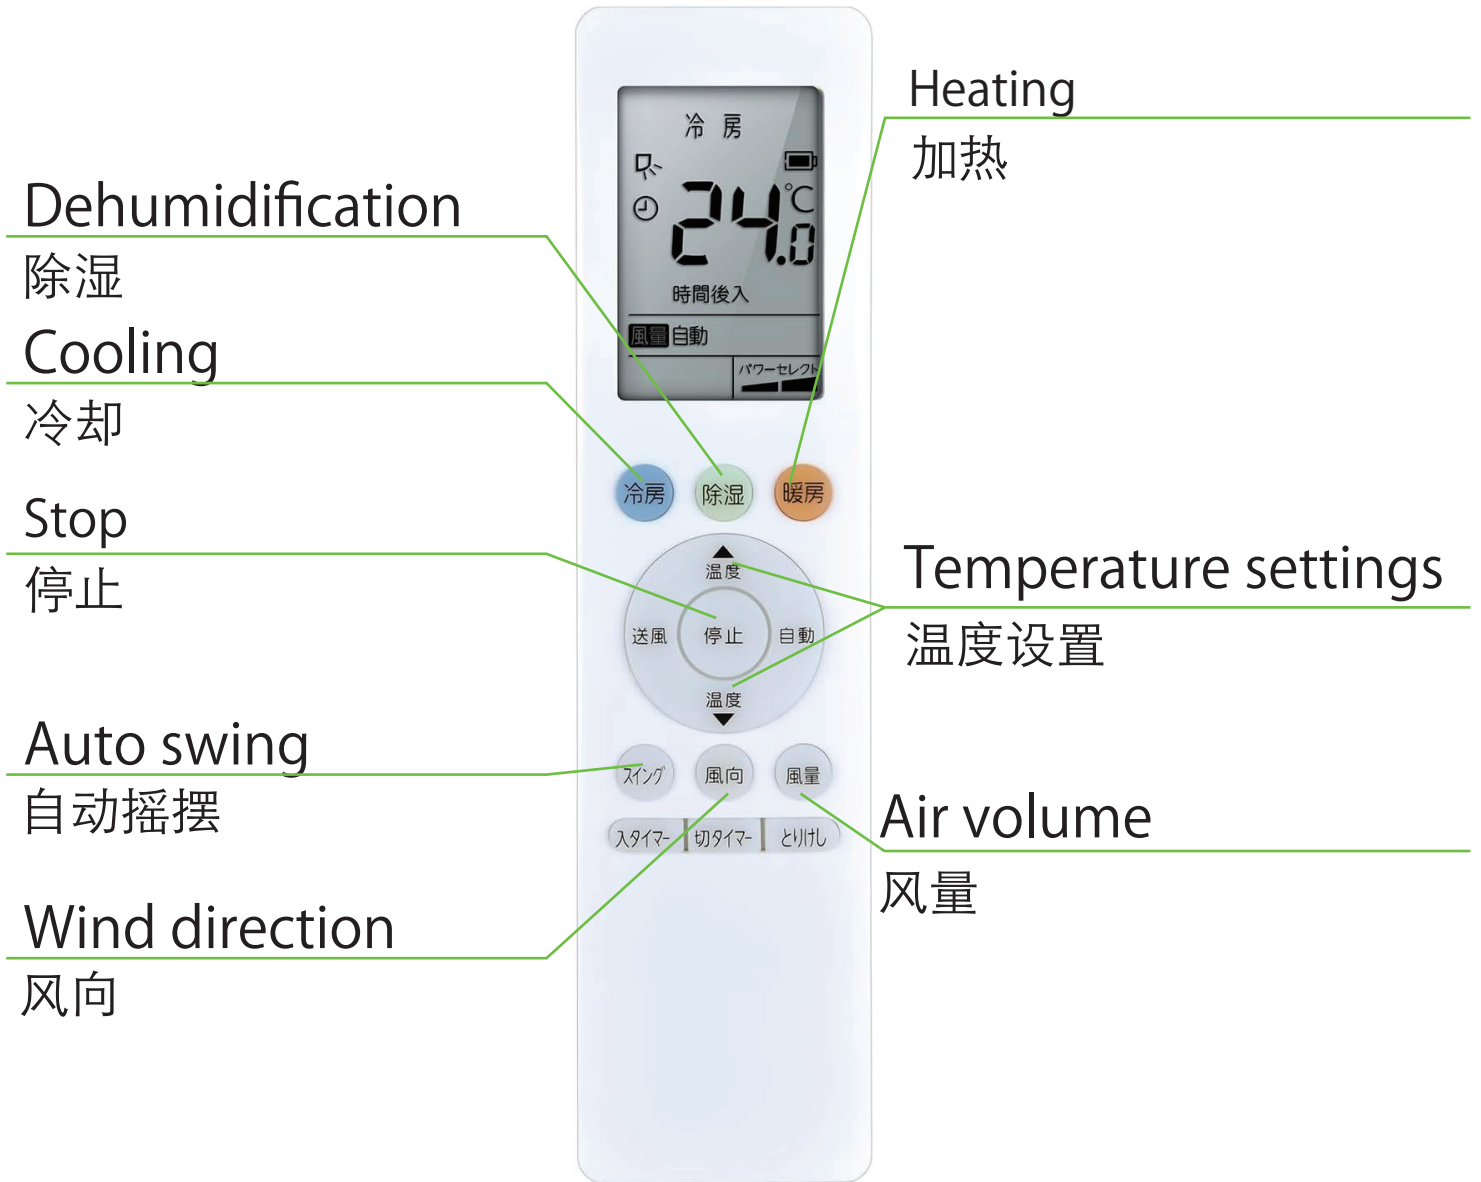

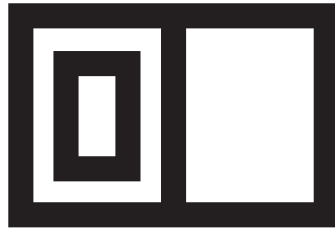

VACATION INN

Wellcome to VACATION INN Hotel HOTEL MANUAL

VACATION INN 羽田 | 東京都大田区東糀谷 3-5-7-103
VACATION INN HANEDA | 3-5-7-103 Higashi-Koujiya Ota-ku Tokyo JAPAN

Wi-Fi



SSID : elecom-940434

PASS : ec2dwy7rp46f



VACATION INN

Wellcome to VACATION INN Hotel

Wi-Fi



SSID : elecom-940434

PASS : ec2dwy7rp46f



VACATION INN

Wellcome to VACATION INN Hotel

Wi-Fi




SSID : elecom-940434

PASS : ec2dwy7rp46f

How to microwave oven

如何微波炉

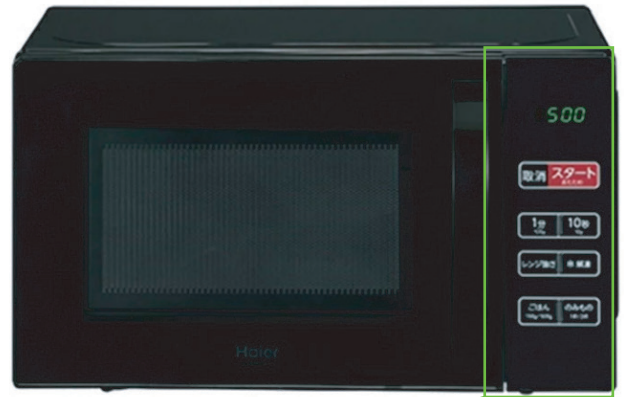

Cancel
取消

1 minute
1分钟

Strength or Weakness
强项和弱项

Rice(150g/300g)
150克/300克 大米

Start
开始

10 seconds
10秒

Thawing
解冻

Drink
喝

VACATION INN 羽田 | 東京都大田区東糀谷 3-5-7-103

VACATION INN HANEDA | 3-5-7-103 Higashi-Koujiya Ota-ku Tokyo JAPAN


How to use laundry detergent

洗衣液使用方法



This detergent combines laundry detergent, fabric softener, and bleach into one.

这种洗涤剂集洗衣液、织物柔顺剂和漂白剂于一体

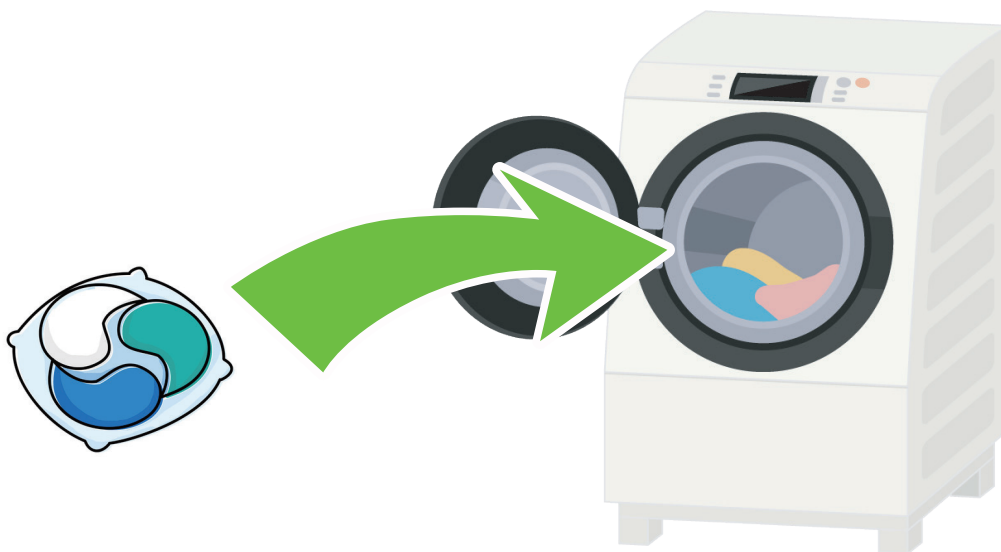

After putting in the clothes to wash, add one gel ball and start the washing machine.

放入衣物后、添加一个凝胶球并启动洗衣机


How to use laundry detergent

洗衣液使用方法



This detergent combines laundry detergent, fabric softener, and bleach into one.

这种洗涤剂集洗衣液、织物柔顺剂和漂白剂于一体

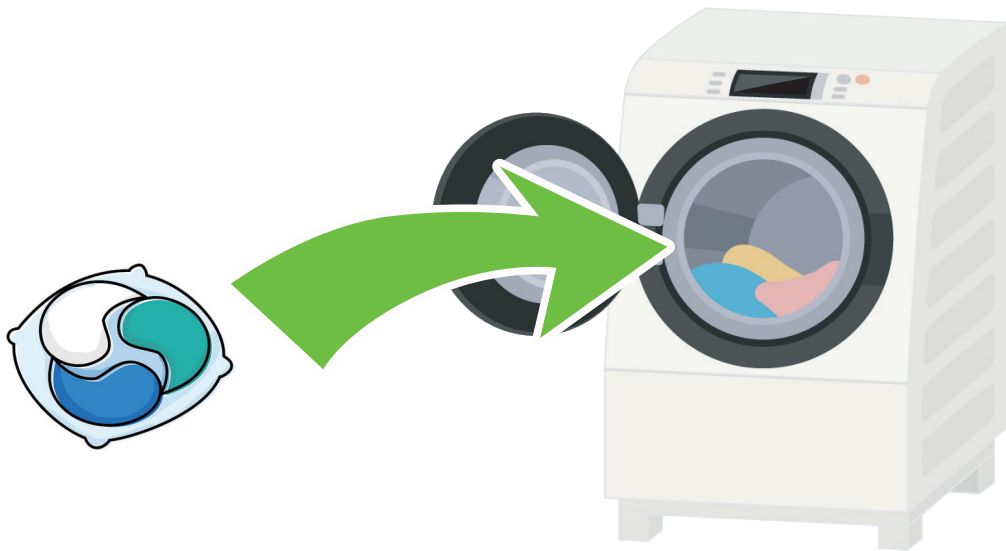

After putting in the clothes to wash, add one gel ball and start the washing machine.

放入衣物后、添加一个凝胶球并启动洗衣机

How to use a gas stove

如何使用燃气灶



1 turn on the power Please press for more than 2 seconds.
点燃：按下直到变成橙色（请按住超过2秒）

2 Please set the temperature
请设置温度

3 Start heating and turn it off.
加热和切割